

ELEVATE THE ART OF CIGAR TASTING

H1: THE FIRST INNOVATIVE DEVICE
FOR CIGAR PRESERVATION & TASTING



PRESERVATION MODE (inside the humidor)


TASTING MODE (inside the cigar)

H1 calculates the moisture content of your cigar.

H1 provides you with recommendations for adjusting your humidor to always achieve the right moisture level for your cigars.

H1 checks the quality of the cigar you are about to smoke.

Moisture Cigare Content Levels (HMC2)				
Too Low	Optimal Range			Too High
	Slightly dry	Optimum	Slightly moist	
◇	🌿🌿🌿	🌿🌿🌿	🌿🌿🌿	◇

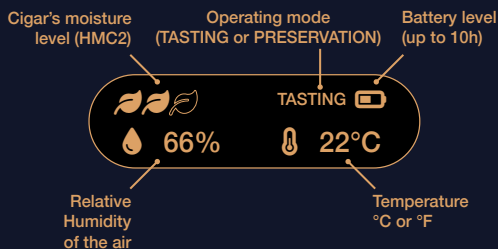


TASTING MODE (inside the cigar)

- Insert the needle in the cigar.
- The H1 screen displays the HMC2 level, the relative humidity, and the temperature.




PRESERVATION MODE (inside the humidor)

- Use the perforated cap.
- Place the H1 inside the humidor. Every 10 minutes, the H1 will collect data, with the final collection at 30 minutes, just before the device automatically switches off.
- An asterisk (*) will appear when data has been saved. Click once to browse through each recommendation. To exit "saved data" mode, simply double-click.
- When you turn the device back on, the previously saved data will appear, along with the recommended adjustment settings process.
- The first screen displays the HMC2 level (leaves), the air's relative humidity, and the temperature. The following screens show the recommended adjustments for your humidor settings.

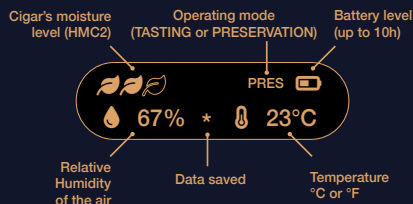

H1 provides recommendations for adjusting, at the current temperature of the humidor, the relative humidity to reach the preferred cigar moisture level (within the optimal range).

Example:



At the current temperature of 23°C, set the relative humidity at 71% in order to achieve the same cigar humidity level as the 70/70 rule



At the current temperature of 23°C, set the relative humidity at 75% in order to have the cigars moisture slightly moist



At the current temperature of 23°C, set the relative humidity at 64% in order to have the cigars moisture slightly dry

Use of the control button:

- Switch On: Press 1 time
- Switch Off: Press 3 seconds
- Mode select TASTING / PRESERVATION: press 1 time (within the 3 first seconds)
- Left & Right-Handed: Press 3 times (when not plugged in)
- °C & °F: Press 1 long press (within the 3 first seconds)
- Regeneration (needle cleaning): press the button three times with approximately 1 second interval between presses (when plugged in)

In Preservation Mode:

- When the display is paused with the latest recorded data (after 10 minutes, 20 minutes or 30minutes) an asterisk will appear
- Press 1 time to reach the first suggestion, press another time to reach the second suggestion
- To exit the "saved data" mode, perform a double-click